

Easy UPS 3M For Internal Batteries

What's in This Document

Safety Precautions.....	1
UPS Shipping Weights and Dimensions	1
Receiving	2
Remove the UPS from the Pallet.....	2

Safety Precautions

▲ WARNING
<p>HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH</p> <ul style="list-style-type: none"> Do not unpack the units before the time of installation. Cover the units and store the units in a temperature controlled indoor environment free of conductive contaminants and humidity, where the units are protected from moisture until the time of start-up. Moisture inside the cabinet can create hazardous short circuits. <p>Failure to follow these instructions can result in death, serious injury, or equipment damage.</p>

NOTICE
<p>RISK OF EQUIPMENT DAMAGE</p> <ul style="list-style-type: none"> Wait until the system is ready to be powered up before installing batteries in the system. The time duration from battery installation until the UPS system is powered up must not exceed 72 hours or 3 days. Batteries must not be stored more than six months due to the requirement of recharging. If the UPS system remains de-energized for a long period, Schneider Electric recommends that you energize the UPS system for a period of 24 hours at least once every month. This charges the batteries, thus avoiding irreversible damage. <p>Failure to follow these instructions can result in equipment damage.</p>

UPS Shipping Weights and Dimensions

UPS	Weight kg	Height mm	Width mm	Depth mm
60 kVA	360	2102	750	1125
80 kVA	387	2102	750	1125

Receiving

External Inspection


When the shipment arrives, inspect the shipping material for any signs of damage or mishandling. Do not attempt to install the system if a damage is apparent. If any damage is noted, contact Schneider Electric and file a damage claim with the shipping agency within 24 hours.

Compare the components of the shipment with the bill of lading. Report any missing items to the carrier and to Schneider Electric immediately.


Verify that labelled units match the order confirmation.

Remove the UPS from the Pallet


1. Move the UPS to the final installation area using a forklift.
2. Remove the shipping materials from the UPS.

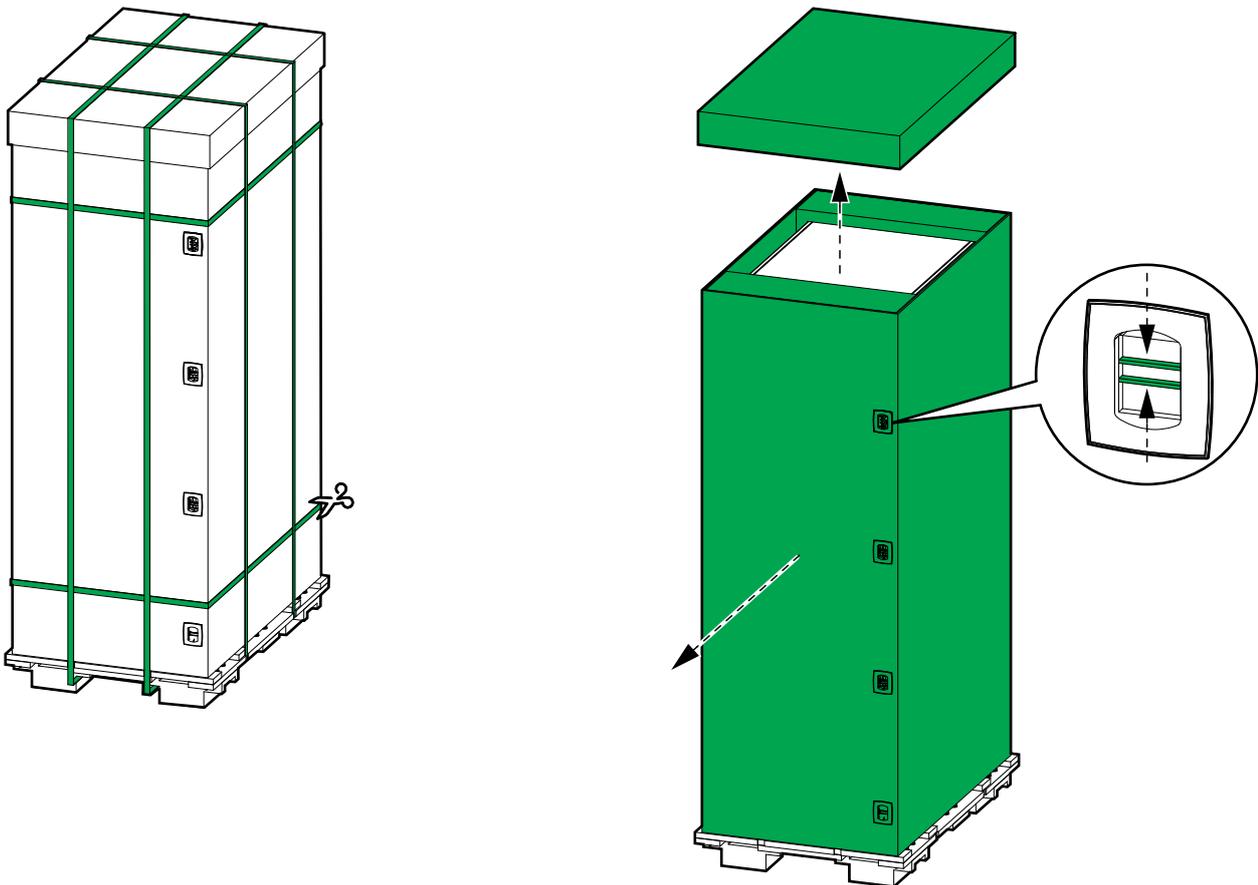


3. Loosen the bolts and remove the four shipping brackets.

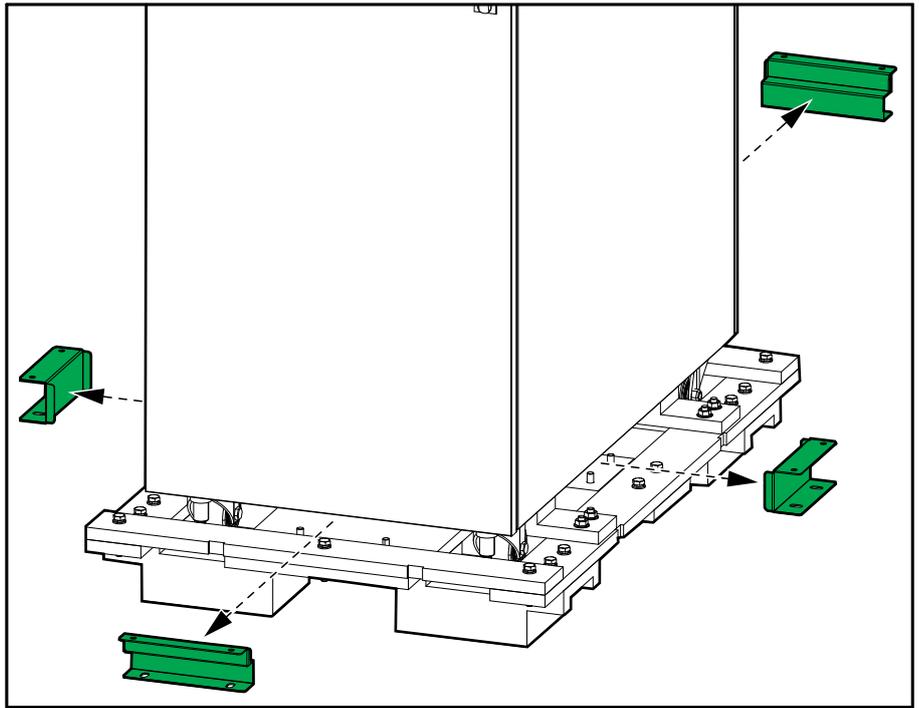

4. Remove the indicated pallet parts.

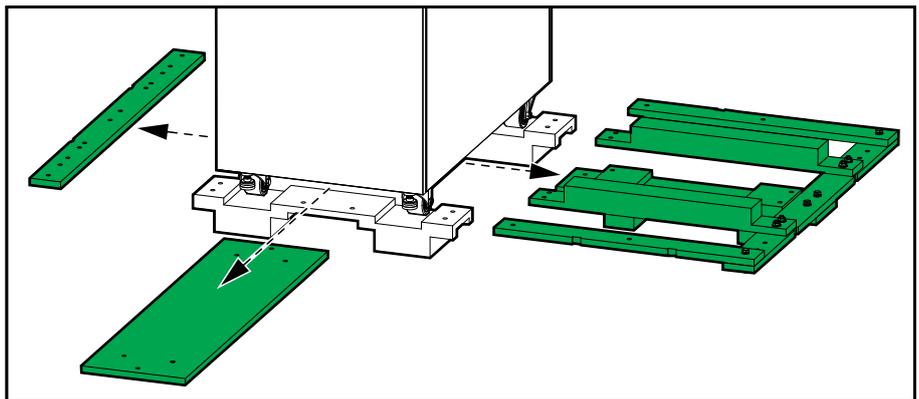

5. Use a forklift to lift the UPS and remove the remaining pallet parts.

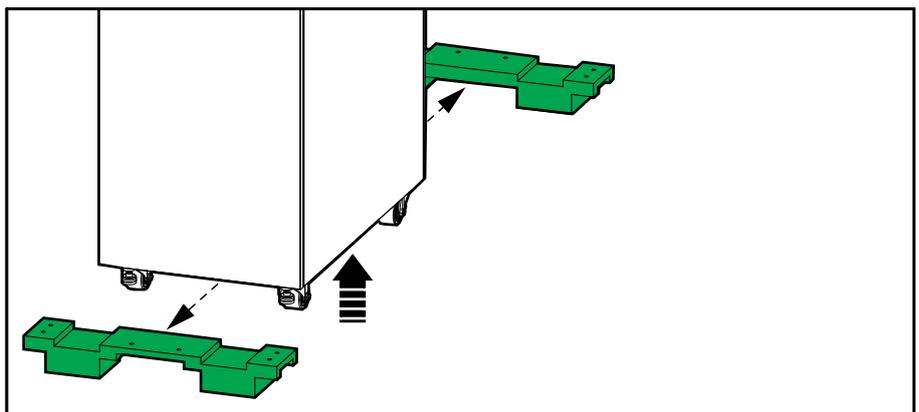

6. Move the UPS to its final location and use a wrench to lower the levelling feet. Ensure that the cabinet is level.

